



Handset instructions WP-H01

Operation of the desk

- Press «↑» to move the desk up;
- Press «↓» to move the desk down.

Setting the memory function

1. Move the desk up or down to the desired position;
2. Press «M» until the display flashes, then press «1» to save position 1;
3. Repeat the procedure to save the other positions. (4 memory positions in total)

The memory positions are not lost when the power is turned off.

Initialization of the system (reset)

1. Press and hold «↓» until the frame has reached the lowest position;
2. Then press and hold «↓» for 5 seconds until you hear a beep.

Lock minimum or maximum height

1. Place the desk at the desired minimum/maximum height;
 - Locking the desk at a minimum height, lower than 97,5 cm.
 - Locking the desk at a maximum height, higher than 97,5 cm.
2. Now lock this height by pressing «↑» and «↓» together for 5 seconds;
3. You can remove the lock by pressing and holding «↑» & «↓» together for 5 seconds.

The lock can also be removed by performing a reset.

Caution:

- This product must comply with the technical parameters (see label control box);
- Keep the product away from water and corrosion-resistant gas;
- Is there a problem with the product? Please contact the point of sale.

Lock and unlock the desk

- Press «M» and «↑» together for 5 seconds to lock the handset.
- Press «M» and «↓» together for 5 seconds to unlock the handset.

Standing reminder

To activate timer, press «1» and «3» together, the display shows «x.xh». Then press «↑» or «↓» to adjust the timing.

- When the handset is in sleep mode a flashing dot indicates that the timer is running.
- When the timer has reached the programmed time a buzzer will sound five times and the handset will wake up from sleep mode.
- Now select the desired height by using «↑» or «↓» button.

User settings

The user can choose to change the desk's default settings. In total there are 6 settings that can be changed. These are numbered in the following order S 1 to S-6.

You can change the settings by pressing «M» for 5 seconds. Then select which setting you want to change, using «↑» and «↓». Then press «M» again to select the selected user setting. Select the desired setting and confirm it by pressing «M».

S1) CM or INCH

1. Press «M» for 5 seconds;
2. Then "S-01" flashes on the display;
3. Press «M» again;
4. Then use «↑» or «↓» to select 1 or 0; (0 = CM & 1 = INCH)
5. To save, press «M» again.

S2) Adjust anti-collision sensor sensitivity

0: means off, 1: is the least sensitive and 8: is the most sensitive.

S3 & S4) Safety setting, do not adjust before consultation with a professional

S5) Determine the minimum height display (standard 65 cm)

Select the minimum height that will be showed on the display.

S6) Determine automatic or manual operation of memory buttons

- 0: means manual placement (press and hold the button);
1: means automatic placement to the selected height.